


 


 


 









 



 

 

 

 





 






 



 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Jump		Guide
	Audio		Dual
	Up / CH+		Up
	Up / CH+		Ch +


 



 
Originalfernbedienung Ersatzfernbedienung

	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	Enter		Ok
	Menu		Menu
	TV / Video		AV
	Index		Smart
	Reveal		Media
	Size		Eject
	Hold		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

	Update		Options
	Info		Info
	TXT / TV		Text

Originalfernbedienung Ersatzfernbedienung

