

 
 














 

 










 
 



 



 
 

 







 



 
 
 
 
 
 
 

 
 
 
 




**Originalfernbedienung Ersatzfernbedienung**

	Function		Power
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Skip >>		>>
	I<< Skip		I<<
	Clear		Exit
	Display		Info

**Originalfernbedienung Ersatzfernbedienung**



 

 
 

















 










	DVD		Smart
	VCR		Media
	Pause		Pause
	Play		Play
	<<		<<
	>>		>>
	Stop		Stop
	Quick Find		Sleep
	Quick Find		Blue
	Up		Up
	Left		Left
	Enter		Ok
	Right / Search		Right
	Right / Search		TV/R
	Right / Search		Red
	Down		Down
	Menu		Menu




 
 
 
 
 

 




 



 

 
 
 
 

 
 
 



 
 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Function		Power
	Speed		3D
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	CH+		Ch +
	CH-		Ch -
	C.Reset		Exit

**Originalfernbedienung    Ersatzfernbedienung**

	Slow		Shift + Play
	Display		Info
	DVD		Smart
	VCR		Media
	Pause		Pause
	Play		Play
	<<		<<
	Stop		Stop
	>>		>>
	Record		Rec
	Quick Find		Shift + TV/R
	Quick Find		Blue
	Up		Up
	Left		Left
	Enter		Ok
	Right / Search		Right
	Right / Search		TV/R



