


 




 


 


 


 
 
 

 
 




 

 
 
 

 

 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
App		Media	
Info		Info	
Epg	 + 	Shift + Guide	
Opt?		Options	
Video		Smart	
Subt.List		Subt	
Sleep Timer		Sleep	
TV		TV/R	
Text		Text	
Zoom		Eject	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Menu Left		Left	
Display	 + 	Shift + Info	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
Audio		Dual	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	



Originalfernbedienung Ersatzfernbedienung






 






 



 


8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
East	+	Shift + Right
Red		Red
Green		Green
Dev		D. Menu
Yellow		Yellow
West	+	Shift + Left
Freeze	+	Shift + Pause
Blue		Blue
Lang./Rewind		<<
Lang./Rewind	+	Shift + Dual
	+	Shift + Ch +
LNB F.Forward		>>

Originalfernbedienung Ersatzfernbedienung

 

 

 







 




	+	Shift + Ch -
Alt/16:9		Format
H/V Play		Play
Dec/Pause		Pause



Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Opt?		Options
Subt.List		Subt
Video		Smart
App		Media
Info		Info
Zoom		Eject
Sleep Timer		Sleep
TV		TV/R
Display	 + 	Shift + Info
Text		Text
TV/SAT		AV
Menu		Menu
Menu Up		Up
Menu Left		Left


 

 
 






 

 




 





 

 
 






Originalfernbedienung Ersatzfernbedienung

OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Audio		Dual
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8tuv		8	8
9wxyz		9	9
Guide Pilote		Guide	Guide
0/10		0	0
FAV Pref.		Pre Ch	Pre Ch
Navi Mode		List	List
East	 + 	Shift + Right	Shift + Right
Red		Red	Red
+	 + 	Shift + Ch +	Shift + Ch +
Lang./Rewind		<<	<<
Lang./Rewind	 + 	Shift + Dual	Shift + Dual
Scan/Setup	 + 	Shift + Options	Shift + Options
Alt/16:9		Format	Format
Green		Green	Green
West	 + 	Shift + Left	Shift + Left
Dev		D. Menu	D. Menu
Yellow		Yellow	Yellow
Freeze		Pause	Pause
Blue		Blue	Blue
	 + 	Shift + Mute	Shift + Mute
Store	 + 	Shift + Down	Shift + Down



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Audio	
Mute		CH/Page-	
Subt.List		1. ?	
Sleep Timer		2abc	
TV		3def	
Video		4ghi	
TV/SAT		5jkl	
Menu		6mno	
Menu Up		7pqrm	
Display		8tuv	
Menu Left		9wxyz	
Menu Right		Guide Pilote	
Exit		0/10	
Menu Down		FAV Pref.	
Volume+		Red	
CH/Page+		Green	
Volume-		Yellow	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Blue			Blue
On/Off	 + 		Shift + Power
West	 + 		Shift + Left
Dev			D. Menu
East	 + 		Shift + Right
	 + 		Shift + Ch +
	 + 		Shift + Ch -
Freeze	 + 		Shift + Pause
Lang./Rewind	 + 		Shift + Dual
Lang./Rewind			<<
H/V Play			Play
Dec/Pause			Pause
LNB F.Forward			>>

