



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Stop/A/B/C/D/E		Stop
	<</Preset		<<
	>>/Preset Up		>>
	>>I/PTY SEEK		>>I
	I<</Freq/RDS		I<<
	Play/PTY SEEK		Play













 



 
 


 
 

 

 


 

 

 
 
**Originalfernbedienung    Ersatzfernbedienung**

	Pause		Pause
	Sleep		Sleep
	On screen		Info
	Menu		Menu
	Set Menu		D. Menu
	VCR		Green
	Video		Yellow
	DVD/CD		Blue
	Tuner		Red
	Status		Media
	Return		Back
	Test		Guide
	Mute		Mute
	Up		Up
	Enter		Ok
	Down		Down
	Right/CH+		Right





**Originalfernbedienung Ersatzfernbedienung**

	Left/CH-		Left
	Volume+		Vol +
	Volume-		Vol -
	Music		3D
	Game		AV
	Sports		Eject
	Movie		Format
	[oo]/DTS		Shift + Dual
	Select		List
	Matrix 6.1		Smart
	Stereo		Options
	Night		Shift + 5
	SW+		Shift + 7
	Center+		Shift + 8
	SURR+		Shift + 9
	SURR-		Shift + Pre Ch
	SW-		Shift + Guide

**Originalfernbedienung Ersatzfernbedienung**

	Center-		Shift + 0
	Angle		Pre Ch
	Audio		Dual
	Subtitle		Subt
	Repeat		Text
	A-B		TV/R



 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Stop/A/B/C/D/E		Stop
	<</Preset		<<
	>>/Preset Up		>>
	I<<		I<<
	Play		Play
	>>I		>>I
	Volume+		Vol +
	Volume-		Vol -

**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute
	DVD/CD		Blue
	VCR		Green
	Video		Yellow
	Tuner		Red

