


 
 


 

 





 







 
 












**Originalfernbedienung    Ersatzfernbedienung**

	Standby - On		Power
	Rec		Shift + Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Return		Back
	T/C		Text
	CH+		Ch +
	CH-		Ch -
	Volume+		Vol +


 

**Originalfernbedienung    Ersatzfernbedienung**

	Volume-		Vol -
	HDD		Red
	DVD		Green
	TUNER		Yellow
	DV		Blue
	Select		Media
	TV/DVD		Smart
	Source		AV
	DVD Rec		Rec
	I<< Prev		I<<
	I<< Prev		<<
	>>I Next		>>I
	>>I Next		>>
	Shuffle		TV/R
	Zoom		Eject
	Stop		Stop
	Play		Play





**Originalfernbedienung Ersatzfernbedienung**

	Pause		Pause
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Timer		Shift + AV
	Setup		Options





 

 

 
 

 


**Originalfernbedienung Ersatzfernbedienung**



 
 







 


 
 




**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Prev		Ch -
Slow Down		Shift + Left
Next		Ch +
Audio Off		Mute
Title		List
Slow Up		Shift + Right
Subt.		Subt
Auto/Track		Shift + 3D
Rep/A-B		Shift + Text
Menu		Menu
Stop		Stop
Repeat/1/All		Text
Menu Up		Up
Pause		Pause
Zoom		Eject
DVD/TV		Smart



 
**Originalfernbedienung Ersatzfernbedienung**

Menu Left		Left
OK Enter		Ok
Return		Back
Menu Right		Right
Progr.		Sleep
Display		Shift + Info
Menu Down		Down
Volume+		Vol +
Next		>>
Top Menu		D. Menu
Volume-		Vol -
1		1
Prev.		<<
2		2
Syst.Preset		Exit
3		3
4		4


 

 

 
 


 



 

 


 

 

 
 




**Originalfernbedienung    Ersatzfernbedienung**

5		5
Digest	 + 	Shift + List
6		6
Auto Scan	 + 	Shift + Options
Remain	 + 	Shift + Smart
7		7
Timer	 + 	Shift + AV
Angle		Format
Pbc		Yellow
Random	 + 	Shift + TV/R
Shuffle	 + 	Shift + D. Menu
Key-	 + 	Shift + Down
8		8
9		9
Setup		Options
Mode	 + 	Shift + Media
Video		AV

**Originalfernbedienung    Ersatzfernbedienung**


 




 

Resume	 + 	Shift + Ok
Key+	 + 	Shift + Up
Record		Rec
Game		Media
R/L		Red
Np		Green
Audio	 + 	Shift + Dual
Play		Play
+10		Guide
Karaoke/Step	 + 	Shift + Pause
Play/Back	 + 	Shift + Play
Echo+	 + 	Shift + Ch +
Info		Info
Echo-	 + 	Shift + Ch -
Rewind		<<
0		0
C/CH		Pre Ch







**Originalfernbedienung**   **Ersatzfernbedienung**

Search		TV/R
Lang		Dual
3D		3D
F.Forward		>>
5.1Ch		Shift + 5
2.1Ch		Shift + 2
NTSC/PAL		Shift + 4
Dimmer		Shift + 0

**Originalfernbedienung**   **Ersatzfernbedienung**