


 



 




Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Picture		Format

Originalfernbedienung Ersatzfernbedienung

	Sound		Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	FAV		Shift + Pre Ch
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	YouTube		Media				
	Netflix		Smart				
	Net+		Shift + Media				
	Rec/DVD Menu		Rec				
	I<<		I<<				
	>>I		>>I				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Rec List/DVD		List				
	Red/Goto		Red				
	Green/A-B		Green				
	Yellow/Angle		Yellow				
	Blue/Repeat		Blue				

