


 



 




Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Picture		Format

Originalfernbedienung Ersatzfernbedienung

	Sound		Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	FAV		Shift + Pre Ch
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R





Originalfernbedienung Ersatzfernbedienung

	YouTube		Media
	Netflix		Smart
	Net+	+	Shift + Media
	Rec/DVD Menu		Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Rec List/DVD		List
	Red/Goto		Red
	Green/A-B		Green
	Yellow/Angle		Yellow
	Blue/Repeat		Blue

Originalfernbedienung Ersatzfernbedienung

