

 



 
 

 


 


 
 
 

 
 
 
 
 


 
 
 
 

 

 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	DVD	 + 	Shift + 1
	TUNER	 + 	Shift + 2
	PORT	 + 	Shift + 3
	AUX	 + 	Shift + 4
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	I<<		I<<
	Step	 + 	Shift + Pause
	Pause		Pause
	>>I		>>I
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Remain		Smart
	Tuning+ / CH+		Ch +
	Tuning- / CH-		Ch -
	Menu		Menu
	Return		Back



