






 







 



 

 
 
 



 
 







 
 

 
 


 




 
 

 











 








Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		5		5
	Mute		Mute		6		6
	DTV / Radio		TV/R		7		7
	AVC		Smart		8		8
	Info		Info		9		9
	TV Audio		Dual		0		0
	DTV / TV		Shift + TV/R		Recall		Back
	Sleep		Sleep		Vol+		Vol +
	Wide		Format		Vol-		Vol -
	Subtitle		Subt		Guide		Guide
	Freeze		Pause		List		List
	Picture		Shift + Format		Prog+		Ch +
	Sound		Shift + Dual		Prog-		Ch -
	1		1		Exit		Exit
	2		2		Favorite		Pre Ch
	3		3		Up		Up
	4		4		Left		Left





Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Right		Right
	Down		Down
	Input		AV
	Menu		Menu
	TXT Hold		Stop
	TXT Update		Shift + Exit
	TXT Subcode		Shift + Subt
	Text / Mix		Text
	TXT Index		Options
	TXT List		Shift + List
	TXT Size		Eject
	TXT Reveal		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

