




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Sys.		TV/R
	Setup		Options
	Eject		Exit
	Program		Sleep
	Clear		Shift + Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Repeat A-B		Shift + Text





 



 
Originalfernbedienung Ersatzfernbedienung

	Repeat 1/All		Text
	Goto		Guide
	Mute		Mute
	PBC		Smart
	Menu		Menu
	Title		Media
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Volume+		Vol +
	Volume-		Vol -
	Prev.		I<<
	Next		>>I
	F.BWD		<<
	F.FWD		>>
	Pause / Step		Pause
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	►/◄ Play/Sel		Ok
	►/◄ Play/Sel		Play
	Right		Right
	Down		Down
	◄◄ Slow		List
	Info		Info
	Zoom		Eject
	Key #		Red
	Key b		Green
	Echo+		Ch +
	Echo-		Ch -
	Vocal		Yellow
	Surround		Blue

Originalfernbedienung Ersatzfernbedienung

