


**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	---		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Red / SUB-T		Red
	Red / SUB-T		Subt
	Green / Sort		Green
	Yellow / Timer		Yellow

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow / Timer		Shift + AV
	Blue / Info		Blue
	Blue / Info		Info
	Menu		Menu
	Exit		Exit
	Up		Up
	Left / <<		Left
	OK		Ok
	Right / >>		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Pause		Pause
	Guide		Guide
	Mute		Mute
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 TV / STB	 AV		
 TV / Radio	 TV/R		
 (((••))) A.L/R	 Smart		
 A.Lang	 Dual		
 Sleep	 Sleep		
 Recall	 Back		
 FAV	 Pre Ch		
 P.STD	 Format		
 P.Size	 List		
 Zoom	 Eject		
 M-PIG	 3D		

