





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Function Tv		AV
	Sleep		Sleep
	Open/Close		Eject
	1/RDS Display		1
	2		2
	3/TA		3
	4/PTY-		4
	5/PTY SEARCH		5
	6/PTY+		6
	7		7
	8		8
	9		9
	0		0
	Full Screen		3D
	Repeat		Text
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tuning/CH+		Ch +
	Tuning/Ch-		Ch -
	S/W Level		Dual
	Disc Menu		D. Menu
	Menu		Menu
	Title Menu/POPUP		Smart
	Tools		Options
	Info		Info







 
 
 

 

 
 
 
 

 
 
 
 
 

 

 


 

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Function Tv		AV
	Sleep		Sleep
	1/RDS Display		1
	2		2
	3/TA		3
	4/PTY-		4
	5/PTY SEARCH		5
	6/PTY+		6
	7		7
	8		8
	9		9
	0		0
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tuning/CH+		Ch +
	Tuning/CH-		Ch -
	Menu		Menu
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	A		Red



