



 



 






 



 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/Demo		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Option		Setup / OPT /
	[ I ]		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu/Browse		Menu / Home
	[ = ]		Text / Goto
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0		0
	P<P		Back / Return
	<<		<< / Tune-
	Stop/Cancel		Exit / Cancel / Clear
	Stop/Cancel		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	[i+]		Info / Angle
	[I2]		Display / Media
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

 









 



 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	P+		CH+ / Page+
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	P↔P		Fav / Marker / PC
	<<		<< / Tune-
	Stop/Cancel		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Back		Back / Return
	Pause		Pause / Step / Freeze





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Red/Demo		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Teletext		Text / Goto
	P+		CH+ / Page+
	P-		CH- / Page-
	1		1
	2		2

 

**Originalfernbedienung    Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P↔P		Fav / Marker / PC
	<<		<< / Tune-
	Stop/Cancel		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Info		Info / Angle
	[112]		Zoom / Size
	Subtitle		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

Back		Back / Return
Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung