
 





 
 
 


 
 




 
 







 
 







Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute
Update		Media
Reveal		Smart
Txt Stop		Stop
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok


 

 








 






Originalfernbedienung Ersatzfernbedienung

Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8






 



 


 
 

 






 
 

 


 

 
 
 

 
 



**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Audio Off		Mute
Slow Down		I<<
Subt.		Subt
Auto/Track		Green
Slow Up		>>I
Rep/A-B	 + 	Shift + Text
Stop		Stop
Title		List
Zoom	 + 	Shift + Eject
Repeat/1/All		Text
Pause		Pause
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung Ersatzfernbedienung**

OK Enter		Ok
Return		Back
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Progr.		Sleep
Next		Ch +
Volume-		Vol -
Top Menu		D. Menu
Prev.		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		Setup	 Options
9		3D	 3D
+10			
EQ			
0			
C/CH			
Digest			
Record			
Open/Close			
Mode			
Angle			
Rewind			
Play			
Clear/00:00			
Audio			
F.Forward			
NTSC/PAL	