



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	POWER		Power				
	Freeze		Mode				
	MENU / EXIT		Menu				
	AUTO		Auto				
	UP / KEYSTONE		Up				
	DOWN / KEYST.		Down				
	LEFT		Left				
	ENTER / MODE		Enter				
	RIGHT / LOCK		Right				
	Blank		Blank / Mute				
	SOURCE		Source				
	VOLUME+		Vol + / Page +				
	VOLUME-		Vol - / Page -				
	Magnify +		+ / Play				
	Magnify -		- / Stop				
	TIMER ON		Freeze / Timer				
	TIMER SET UP		Shift + Freeze / Timer				

