
 

 
 
 



 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	<<		<<
	>>		>>
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	Pause/Step		Pause
	DVD Menu		D. Menu
	Display		Info
	Return		Back
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Title		Guide
	O)/Audio		Dual
	[...]/Subtitle		Subt
	Camera/Angle		Format
	Setup		Options
	Program		Sleep



