



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Vol -		Vol-
	Vol +		Vol+
	Phono		Smart / List
	Tuner Station -		<< / Tune-
	Tuner Station +		>> / Tune+
	Stop Deck I		OK
	< Deck I		Left
	> Deck I		Right
	Stop Deck II	+	Shift + Stop /
	< Deck II	+	Shift + Left
	> Deck II	+	Shift + Right
	Rec Deck II	+	Shift + Rec / Rec Mode
	<< Deck II	+	Shift + << /
	>> Deck II	+	Shift + >> /
	Pause Deck II	+	Shift + Pause / Step /
	Disc CD		Eject / Surround

**Originalfernbedienung Ersatzfernbedienung**

	Play CD		Play / Slow
	Sleep		Sleep / Timer
	I << CD		I << / Preset-
	>> I CD		>> I / Preset+
	Snooze		Display / Media
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold

