




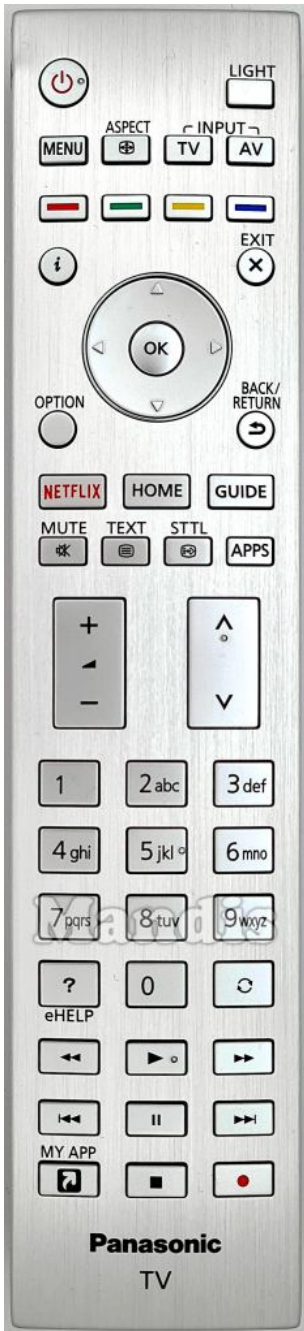
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	[+]/Aspect		3D
	Input TV		TV/R
	Input AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	i		Info
	X/Exit		Exit
	Option		Options
	Back/Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Netflix		Media
	Home		Smart
	Guide		Guide
	Mute		Mute
	Text		Text
	STTL		Subt
	APPS		Shift + Smart
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	?/eHelp		Dual
	Recall		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	l<<		l<<
	Pause		Pause
	>>l		>>l
	Stop		Stop
	Rec		Rec
	My APP		Shift + Media

Originalfernbedienung Ersatzfernbedienung

