























 

 


 





**Originalfernbedienung    Ersatzfernbedienung**

























 
 


 




 

	[ ]→		Exit / Cancel / Clear
	Power		Power
	[1 2]		Shift + Red / Netflix /
	[← →]		Shift + Green / APP /
	[   >   <   ]		Shift + Yellow / YouTube /
	Red / Rec		Rec / Rec Mode
	Red / Rec		Red / Netflix / Search
	Green / <<		Green / APP / Repeat
	Green / <<		<< / Tune-
	Yellow / Stop		Stop / Hold
	Yellow / Stop		Yellow / YouTube / Repeat
	Blue / Play		Blue / Prime Video / Random
	Blue / Play		Play / Slow
	White / >>		>> / Tune+
	White / >>		Fav / Marker / PC
	[   ]		Shift + Guide / EPG / -/-
	Up		Up

**Originalfernbedienung    Ersatzfernbedienung**

	[≡]		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	[> <]		Pause / Step / Freeze
	Down		Down
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P / -/--		Guide / EPG / -/--
	[⏻]		Sleep / Timer
	[?]		AV / Input / RDS
	[⇅] / Zoom		Zoom / Size
	Smart Sound		Sound / Title
	[ <> ]		D.Menu / Top
	Smart Picture		Picture / Format
	Instant Rec	 + 	Shift + Rec / Rec Mode
	I-II		Audio / Lang I/II
	DNR		Back / Return
	[ ]		Setup / OPT /





**Originalfernbedienung    Ersatzfernbedienung**






	DVD		Shift + 2
	[1 2]		Red / Netflix / Search
	[< >]		Green / APP / Repeat
	[   >   <   ]		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	[   ]		Shift + Guide / EPG / -/-
	Up		Up
	[≡]		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	[> <]		Pause / Step / Freeze
	Down		Down
	[...]		Subtitle / EQ

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P / -/-		Guide / EPG / -/-












Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Smart Sound	 Sound / Title		
 [ <> ]	 D.Menu / Top		
 Smart Picture	 Picture / Format		
 Instant Rec	 Rec / Rec Mode		
 Setup / OPT /	 Setup / OPT /		








## Originalfernbedienung Ersatzfernbedienung







 



 













 
 


 




 
 
	[ ]→		Exit / Cancel / Clear
	Power		Power
	[1 2]		Shift + Red / Netflix /
	[← →]		Shift + Green / APP /
	[   >   <   ]		Shift + Yellow / YouTube /
	Red / Rec		Red / Netflix / Search
	Red / Rec		Rec / Rec Mode
	Green / <<		Green / APP / Repeat
	Green / <<		<< / Tune-
	Yellow / Stop		Stop / Hold
	Yellow / Stop		Yellow / YouTube / Repeat
	Blue / Play		Blue / Prime Video / Random
	Blue / Play		Play / Slow
	White / >>		Fav / Marker / PC
	White / >>		>> / Tune+
	[   ]		Shift + Guide / EPG / -/-
	Up		Up

## Originalfernbedienung Ersatzfernbedienung

	[≡]		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	[> <]		Pause / Step / Freeze
	Down		Down
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P / -/--		Guide / EPG / -/--
	[⊙]		Sleep / Timer
	[?]		AV / Input / RDS
	[↕] / Zoom		Zoom / Size
	Smart Sound		Sound / Title
	[ <> ]		D.Menu / Top
	Smart Picture		Picture / Format
	Instant Rec	 + 	Shift + Rec / Rec Mode
	I-II		Audio / Lang I/II
	DNR		Back / Return
	[⊞]		Setup / OPT /













Originalfernbedienung Ersatzfernbedienung

	[ ]→		Exit / Cancel / Clear
	Power		Power
	[1 2]		Red / Netflix / Search
	[← →]		Green / APP / Repeat
	[   > < ]		Yellow / YouTube / Repeat
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	[   ]		Shift + Guide / EPG / -/-
	Up		Up
	[≡]		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	[> <]		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	0		0
	P<P / -/--		Guide / EPG / -/--
	[⊙]		Sleep / Timer
	[?]		AV / Input / RDS
	[↕] / Zoom		Zoom / Size
	Smart Sound		Sound / Title
	[ <> ]		D.Menu / Top
	Smart Picture		Picture / Format
	Instant Rec	+	Shift + Rec / Rec Mode
	I-II		Audio / Lang I/II
	DNR		Back / Return
	[ ]		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung