




 

 
 


 
 





 


 

 
 

 

 



 



 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	HDMI		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	CH.List		List
	P+		Ch +
	P-		Ch -
	Mute		Mute
	Content		D. Menu
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info/Clock		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red



