 
 


 



 



 

 
 
 

 

 

 

 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Guide		Guide
	DVI		Back
	VGA		Shift + Back
	RGB/HV		Shift + Subt
	Option		Options
	HDMI		Red
	DVD/HD		Green
	Video		Subt
	TV		Shift + TV/R
	Picture Mode		Shift + 3D
	Size		Format
	Sound		Dual
	Audio Input		List
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Pre Ch
	ENT		Ok
	Display		Info
	Menu		Menu
	Auto Setup		Smart
	Exit		Exit
	Up		Up
	Down		Down
	+		Right
	-		Left





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Set		D. Menu
	Vol-		Vol -
	Mute		Mute
	CH RTN		Media
	CH+		Ch +
	CH-		Ch -
	Still On/Off		Eject
	Capture		Blue
	[≡]		Text
	PIP On/Off		3D
	Input		AV
	Change		Yellow
	MTS		TV/R
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

