 

 
 


 

 





 



 
 
 
 
 
 

 
 
 

 
 
 





 
 
 
 
 
 
 

 
 
 




 
 
 

 
 
 
 
 
 



 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Stop		Stop
	Pause		Pause
	Play		Play
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Top Menu	 + 	Shift + Menu
	Menu		Menu
	Display		Info
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Play Mode	 + 	Shift + Play
	Subtitle		Subt
	Audio		Dual
	Angle		Red
	Repeat Mode		Text
	A-B Repeat		Green
	V.S.S.		Media
	Setup		Options
	Cancel		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7



