







Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	STB		Green
	VCR		Yellow
	DVD		Blue
	AUX		Red
	TV		TV/R
	Vol Mode		Dual
	Auto Setup		Media
	Input Mode		AV
	Sleep		Sleep
	1/5Beam		1
	2/ST+3Beam		2
	3/3Beam		3
	4/Stereo		4
	5/My Beam		5
	6/My Sur.		6
	Sur. Decode		Options

Originalfernbedienung Ersatzfernbedienung

	CH Level		Smart
	Menu		Menu
	Return		Back
	Test		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute





Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	STB		Green
	VCR		Yellow
	DVD		Blue
	AUX		Red
	TV		TV/R
	Input 1 Tv		Text
	Input 2 Tv		Eject
	Vol. Mode		Dual
	Auto Setup		Media
	Input Mode		Format
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Sur.Decode		Options
	CH Level		Smart
	Menu		Menu
	Return		Back
	Test		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +





Originalfernbedienung Ersatzfernbedienung

	Power AV		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	STB		Green
	AUX		Red
	VCR		Yellow
	DVD		Blue
	TV		TV/R
	<<		<<
	Stop		Stop
	>>		>>
	Pause		Pause
	Play		Play

Originalfernbedienung Ersatzfernbedienung

