



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Title		Options
	Subtitle		Subt
	SCR Size		Format
	Angle		Red
	Repeat		Text
	A-B Repeat		Green
	BRT Cont.		Blue
	Device		Yellow
	Menu		Menu
	Setup		D. Menu
	Info		Info
	Search		TV/R
	Audio		Dual
	Movie		Shift + 1
	Tv Out		AV
	Music		Shift + 2


 






 

 
 
 


 
 
 

 




**Originalfernbedienung Ersatzfernbedienung**

	Photo		Shift + 3
	All Media		Shift + 4
	←Slow		Back
	Stop		Stop
	Play		Play
	Pause		Pause
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	1/Select		1
	2/Select All		2





**Originalfernbedienung    Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8/Refresh		8
	9		9
	0/Sleep		0
	./ Bookmark		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung    Ersatzfernbedienung**