






 

 


 




 
 
 

 

 

 


 


 



 
 


 








 

 

 


 









 

 




Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1/Mark		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10/←		Guide
	+10/→		Pre Ch
	Disp/Chara		Info
	Cancel		Eject
	Set		Menu
	Title/Edit		Back



 



 
 
 


 

 

 



 






 


Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Group Skip >>I		>>I
	I<<Group Skip		I<<
	>>I		>>
	I<<		I<<
	Stop/PTY		Stop
	Group Title/Edit		Smart
	Title Search		Format
	Play/Pause CD		Play
	Play/Pause		Pause
	Play/Pause USB		Red
	Play/Pause iPod		Blue
	AUX/FM/AM		List
	Play/FM Mode		TV/R
	Repeat/TA/News/I		Text
	Group Select		Options
	A.Standby		Exit





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Clock/Timer		AV
	Dimmer		3D
	HQ/SP/EP		Subt
	Rec Speed		Rec
	Marking Mode		D. Menu
	Sound Mode		Dual
	AHB PRO		Green
	Bass/Treble		Yellow
	QP Link/USB Mode		Media
	Vol+		Vol +
	Vol-		Vol -
	Fade Muting		Mute
	A1	 + 	Shift + 1
	A2	 + 	Shift + 2

Originalfernbedienung Ersatzfernbedienung

