



 
 

 






 









 


 

 






Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	MUTE		Mute
	DISP		Shift + Info
	AUDIO		Dual
	Tv/Radio		TV/R
	SLEEP		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	USB		AV
	MENU		Menu
	EXIT		Exit
	UP		Up
	DOWN		Down
	RIGHT		Right
	LEFT		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	P↑		Shift + Ch +
	P↓		Shift + Ch -
	INFO		Info
	BACK		Back
	ZOOM		Eject





**Originalfernbedienung    Ersatzfernbedienung**

	RED / FIND		Red
	GREEN		Green
	YELLOW / MARK		Yellow
	BLUE / JUMP		Blue
	FAV / A - B		Pre Ch
	SUB / SWP		Subt
	DVR		Media
	TXT		Text
	SKIP PREV		I<<
	SKIP NEXT		>>I
	REW		<<
	FWD		>>
	PAUSE		Pause
	REC		Rec
	PLAY		Play
	STOP		Stop

**Originalfernbedienung    Ersatzfernbedienung**