














 
 

 



















Originalfernbedienung Ersatzfernbedienung

	AMP Power		Power
	TUNER PRESET		Ch -
	TUNER PRESET		Ch +
	AMP SP-A		Red
	AMP SP-B		Green
	AMP CD		1
	AMP Phono		2
	AMP AUX		3
	AMP Tuner		4
	AMP Tape-2		6
	AMP Tape-1		5
	AMP Muting		Mute
	Volume+		Vol +
	Volume-		Vol -
	Play CD		Play
	Pause CD		Pause
	Stop CD		Stop

Originalfernbedienung Ersatzfernbedienung

	I<< CD		I<<
	>>I CD		>>I
	<< CD		<<
	>> CD		>>
	Repeat CD		Text
	A-B Deck		Smart
	Pause Deck		Shift + Pause
	Stop Deck		Shift + Stop
	Rec Deck		Shift + Rec
	<< Deck		Shift + <<
	>> Deck		Shift + >>
	< Play Deck		Left
	Play > Deck		Right
	Play > Deck		Shift + Play

