

 
 
 




 
 
 

 
 
 
 
 
 
 



 
 

 
 

 
 
 


 
 

 

 
 
 
 
 

 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	Eject/Open-Close		Eject
	VCR		Smart
	DVD		Media
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	AV/Input		AV
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	<<		<<
	Stop		Stop
	Play		Play
	Pause/Step		Pause
	Disc Menu/List		Menu
	Home		Shift + Smart
	Display		Info
	Return		Back
	Enter		Ok
	Up		Up
	PR/CH/TRK+		Ch +
	PR/CH/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	O))/Audio		Dual
	[...]/Subtitle		Subt
	Zoom	+	Shift + Eject
	I.Skip		3D
	Rec		Rec
	TV/VCR		TV/R
	CHP.ADD		Text
	Title		Options
	Rec Mode	+	Shift + Rec
	Dubbing		Mute
	Play Mode	+	Shift + Play
	Marker		Pre Ch
	Search	+	Shift + TV/R
	Thumbnail		List
	Power Tv	+	Shift + Power
	AV/Input Tv	+	Shift + AV
	Vol+ Tv		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol- Tv		Vol -
	PR/CH+ Tv	+	Shift + Ch +
	PR/CH- Tv	+	Shift + Ch -

