 
 
 

 
 
 
 

 

 


 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	View		3D
	Folder		D. Menu
	Sort		Sleep
	Storage		Rec
	Red/Movie		Red
	Green/Photo		Green
	Yellow/Music		Yellow
	Blue/File		Blue
	Aspect		Format
	Zoom		Eject
	Slide		Media
	Rotate		List
	Goto		TV/R
	Menu		Menu
	Title		Info
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Home		Smart
	Page Up		Ch +
	Page Down		Ch -
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Back		Back
	OSD		Text
	Audio		Dual
	Sub-T		Subt





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Output		AV
	Setup		Options

Originalfernbedienung Ersatzfernbedienung

