





















 







Originalfernbedienung Ersatzfernbedienung

Audio Off		Mute / Dimmer
Game		Blue / Prime Video / Random
Pbc		AV / Input / RDS
Digest		Text / Goto
C/CH		Sleep / Timer
Auto/Track		Picture / Format
DVD/TV		Smart / List
3D	 + 	Shift + 3
Menu Down		Down
Slow Down		CH- / Page-
Slow Up		CH+ / Page+
OK Enter		OK
Menu Up		Up
Progr.		TV/Radio /
Menu Right		Right
2		2
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung

Rep/A-B		Yellow / YouTube / Repeat
Rewind		<< / Tune-
Repeat/1/All		Green / APP / Repeat
Prev.		I<< / Preset-
F.Forward		>> / Tune+
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
1		1
Angle		Info / Angle
Play		Play / Slow



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Record	 Rec / Rec Mode		
Audio	 Audio / Lang I/II		
Setup	 Setup / OPT /		
Mark	 Fav / Marker / PC		
Open/Close	 Eject / Surround		
Menu	 Menu / Home		
Stop	 Stop / Hold		
Pause	 Pause / Step / Freeze		
Subt.	 Subtitle / EQ		
Title	 Sound / Title		
Zoom	 Zoom / Size		
On/Off	 Power		
Display	 Display / Media		
Return	 Back / Return		
Next	 >>I / Preset+		
Top Menu	 D.Menu / Top		

