 









**Originalfernbedienung Ersatzfernbedienung**

Power ON/Off		Power
Next/Prog+		>>I
Tape 1 Preset		Dual
Vol Rs-/Effect		Subt
Tape 2 Pre./eq		TV/R
Vol Rs+/S.Mode		Format
Preset Pause	 + 	Shift + Pause
CD/Theater		Smart
Prev./Prog-		I<<<
Mute		Mute
Woofer/Speed		3D
Tape 1 Stop	 + 	Shift + Stop
Tape 1 Hall/Ats		List
Funct./Direct		Media
Program	 + 	Shift + Sleep
Mode		Options
Sleep		Sleep

**Originalfernbedienung Ersatzfernbedienung**

CD Play		Play
Next/Prog+		Ch +
Tape 1 F.FWD	 + 	Shift + >>
Tape 1 Rew	 + 	Shift + <<
Tape 1 Play	 + 	Shift + Play
Display		Info
Volume+		Vol +
CD Rewind		<<<
Volume-		Vol -
CD F.FWD		>>>
Prev./Prog-		Ch -
CD Pause		Pause

