 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- 10+	 + 	Shift + Guide
	Recall		Back
	P.Mode	 + 	Shift + Format
	Nicam	 + 	Shift + Options
	S.Mode		Dual

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Aspect		Format
	Sleep		Sleep
	Freeze	 + 	Shift + Stop
	CH+		Ch +
	CH-		Ch -
	TV		Smart





Originalfernbedienung Ersatzfernbedienung

	USB		Media
	Shift		3D
	Rec		Rec
	Auto / D.Setup		Options
	FAV / D.Menu		Pre Ch
	FAV / D.Menu	+	Shift + Menu
	EPG / D.Title		Guide
	Text / Angle		Text
	Subtitle		Subt
	Mix / Eject	+	Shift + Text
	Mix / Eject		Eject
	Play/Pause / TV/Radio		Play
	Play/Pause / TV/Radio		Pause
	Play/Pause / TV/Radio		TV/R
	Stop / Hold		Stop
	<< / Index		<<
	>> / Size		>>

Originalfernbedienung Ersatzfernbedienung

	I<< / Reveal		I<<
	>>I / Subpage		>>I
	Red / Audio	+	Shift + Dual
	Red / Audio		Red
	Green / Goto		Green
	Yellow / Repeat		Yellow
	Blue / A-B		Blue

