 




Originalfernbedienung	Ersatzfernbedienung
	Mute
	Power
	1
	2
	3
	Red / Clear
	Red / Clear
	4
	5
	6
	Green / Sleep
	Green / Sleep
	7
	8
	9
	Yellow / Input
	Yellow / Input

Originalfernbedienung	Ersatzfernbedienung
	C-0 Stop
	0 / ATK
	C-Reset
	Blue / Normal
	Index- / [≡]
	Up / PR/TRK+ / Page+
	Up / PR/TRK+ / Page+
	Index+ / [≡i]
	Left / Vol-
	Left / Vol-
	Menu
	Menu
	Right / Vol+
	Right / Vol+
	Rec / OTR
	Down / PR/TRK- / Page-
	Down / PR/TRK- / Page-





Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW STEP-FREEZE HOLD REC MODE

▶ || ◻ ●

TUNE- TUNE+ PRESET- PRESET+

◀ ▶ ◀ ▶

TITL LANG EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME **ANGLE**

MENU **INFO**

OK

CLEAR **RETURN**

EXIT **BACK**

CANCEL **LIST**

+ **SMART** **+**

VOL **MEDIA** **CH**

- **DISPLAY** **-**

TV **DVD** **CD-STR**

1 **2** **3**

VIDEO **TAPE** **TUNER**

4 **5** **6**

AUX-HDD **USB** **BLUETOOTH**

7 **8** **9**

TV **HDMI-SAT** **PC**

GUIDE **0** **FAV**

EPG **MARKER**

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
shop

www.mandis.tv