


 

 

 

 











 

 















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	HDD		Shift + Media
	DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Cancel		Exit
	AV		AV
	Input Select		Eject

**Originalfernbedienung    Ersatzfernbedienung**

	Direct Tv Rec		TV/R
	ShowView		3D
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Pause		Pause
	Stop		Stop
	Play		Play
	Menu / Play List		Menu
	Top Menu / Direct Navigator		D. Menu
	Functions		Options
	Return		Back





