


 



 




 




 



 



 


 
 
 
 



 
 



 



 




 



 
 



 












Originalfernbedienung Ersatzfernbedienung

	Power TV		Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Display		Info
	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options

Originalfernbedienung Ersatzfernbedienung

	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	1 Tv		1
	2 Tv		2
	3 Tv		3
	4 Tv		4
	5 Tv		5
	6 Tv		6
	7 Tv		7
	8 Tv		8
	9 Tv		9
	0 Tv		0
	>10 Tv		Guide
	CH-		Shift + Ch -





Originalfernbedienung Ersatzfernbedienung

	CH+		Shift + Ch +
	Tv/Video		AV
	Disc/Deck 1/2		D. Menu
	Muting		Mute
	Vol-		Vol -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Play DVD		Play
	I<</<< DVD		<<
	Stop DVD		Stop
	>>/>>I DVD		>>
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Display		Info

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options
	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6
	7 DVD		7
	8 DVD		8












 

 

 

 

 
 

 

 



 



 

Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	9 DVD		9				
	0 DVD		0				
	>10 DVD		Guide				
	CH-		Shift + Ch -				
	CH+		Shift + Ch +				
	Disc/Deck 1/2		List				
	Muting		Mute				
	Vol-		Vol -				
	Vol+		Vol +				




Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	Power Tape	 + 	Shift + Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Play Tape	 + 	Shift + Play
	Play CD		Play
	I<</<< Tape	 + 	Shift + <<
	I<</<< CD		<<
	Stop Tape	 + 	Shift + Stop
	Stop CD		Stop
	>>/>>I Tape	 + 	Shift + >>
	>>/>>I CD		>>
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Display		Info
	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options
	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	Direct Tuning/Disc Enter		D. Menu
	1 CD-Tape		1
	2 CD-Tape		2





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	3 CD-Tape		3				
	4 CD-Tape		4				
	5 CD-Tape		5				
	6 CD-Tape		6				
	7 CD-Tape		7				
	8 CD-Tape		8				
	9 CD-Tape		9				
	0 CD-Tape		0				
	>10 CD-Tape	 - / -	Guide				
	CH-		Shift + Ch -				
	CH+		Shift + Ch +				
	Disc/Deck 1/2		List				
	Disc/Deck 1/2		Shift + List				
	Muting		Mute				
	Vol-		Vol -				
	Vol+		Vol +				





Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	Power Tuner/Band	 + 	Shift + Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Play		Play
	I<</<<		<<
	Stop		Stop
	>>/>>I		>>
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options
	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	Direct Tuning/Disc Enter		D. Menu
	1 VCR		1
	1 Tuner/Band	 + 	Shift + 1
	2 VCR		2
	>10 VCR		Guide
	2 Tuner/Band	 + 	Shift + 2
	3 VCR		3

 
 
 


 







Originalfernbedienung Ersatzfernbedienung

	3 Tuner/Band	 + 	Shift + 3
	4 VCR		4
	4 Tuner/Band	 + 	Shift + 4
	5 VCR		5
	5 Tuner/Band	 + 	Shift + 5
	6 VCR		6
	6 Tuner/Band	 + 	Shift + 6
	7 VCR		7
	7 Tuner/Band	 + 	Shift + 7
	8 VCR		8
	8 Tuner/Band	 + 	Shift + 8
	9 VCR		9
	9 Tuner/Band	 + 	Shift + 9
	0 VCR		0
	0 Tuner/Band	 + 	Shift + 0
	CH-	 + 	Shift + Ch -
	CH+	 + 	Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	Disc/Deck 1/2		List
	Muting		Mute
	Vol-		Vol -
	Vol+		Vol +
>10 button" data-bbox="508 321 541 354"/>	>10	 + 	Shift + Guide

