

 









 





 

 
 
 

 

 

 


 









 
 
 

 



 
 

 

 
 
 
 
 


 





 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	CD		Green
	TUNER		Red
	USB / MP3 LINK		Yellow
	TAPE		Blue
	Up		Up
	Left / I<<		Left
	Left / I<<		I<<
	Play/Pause		Pause
	Play/Pause		Play
	Play/Pause		Ok
	Right / >>I		Right
	Right / >>I		>>I
	Down		Down
	Display / RDS		Info
	Mute		Mute



 









 





 
 
 

 

 


 


Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Vol-		Vol -
	Vol+		Vol +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog		Sleep
	Sleep / Timer		AV
	DSC		Smart
	DBB		Media







 
 


 


 

 




 
 
 
 


 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	CD		Green
	TUNER		Red
	USB / MP3 LINK		Yellow
	TAPE		Blue
	Up		Up
	Left / I<<<		I<<<
	Left / I<<<		Left
	Play / Pause		Play
	Play / Pause		Pause
	Play / Pause		Ok
	Right / >>>I		Right
	Right / >>>I		>>>I
	Down		Down
	Display / RDS		Info
	Mute		Mute



 









 





 
 
 

 
 
 

 

 


 


Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Vol-		Vol -
	Vol+		Vol +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog		Sleep
	Repeat / Shuffle		Text
	Sleep / Timer		AV
	DSC		Smart








 
 
 

 



 
 

 

 
 
 
 
 


 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	CD		Green
	TUNER		Red
	USB / MP3 LINK		Yellow
	TAPE		Blue
	Up		Up
	Left		Left
	I<<		I<<
	Ok		Ok
	Pause		Pause
	Play		Play
	>>I		>>I
	Right		Right
	Down		Down
	RDS/Display		Info
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Vol-		Vol -
	Vol+		Vol +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog		Options
	Repeat/Shuffle		Text
	Sleep/Timer		Sleep
	DSC		Smart



