 

 

 



 

 

 

 

 
 








 

 









 


 


 
 
 
 


 

 




**Originalfernbedienung Ersatzfernbedienung**

	Open / Close		Eject / Surround
	Power		Power
	CD / DVD		Shift + 3
	CD / DVD		Shift + 2
	Band		Smart / List
	Band		Shift + 6
	AUX		Shift + 7
	Mute		Mute / Dimmer
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	RDS		AV / Input / RDS
	4		4
	5		5
	6		6



































**Originalfernbedienung Ersatzfernbedienung**

	PTY		Shift + Smart / List
	7		7
	8		8
	9		9
	PTY Search		Shift + Display / Media
	Repeat		Green / APP / Repeat
	0		0
	Repeat A-B		Yellow / YouTube / Repeat
	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Sound Mode		Sound / Title
	Preset+		Shift + >>I / Preset+
	Preset+		CH+ / Page+
	Audio		Audio / Lang I/II
	Volume+		Vol+
	Preset-		Shift + I<< / Preset-
	Preset-		CH- / Page-







 









Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Volume-		Vol-
	Zoom		Zoom / Size
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Display		Display / Media
	Setup		Setup / OPT /
	Stop		Stop / Hold
	Pause / Step		Pause / Step / Freeze
	Play		Play / Slow
	<< / Slow Scan-		<< / Tune-
	>> / Slow		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	I<< / Skip Scan-		I<< / Preset-
	>>I / Skip Scan+		>>I / Preset+
	Title		Shift + Sound / Title
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Angle		Info / Angle



Scan+