


 



 
 
 



 







 

 



 

 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Muting		Mute
	1 / Disc 1		1
	2 / Disc 2		2
	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10		Guide
	Disc		Media
	Program	 + 	Shift + Sleep
	Cancel		Back




Originalfernbedienung Ersatzfernbedienung

	Repeat		Text
	Random		Options
	Tape		Red
	CD		Green
	Tuner		Yellow
	AUX		Blue
	EQ		Subt
	3D AI		3D
	I<<< / <<<		<<<
	I<<< / <<<		I<<<
	>>> / >>>I		>>>I
	>>> / >>>I		>>>
	Play Rev / Pause / Down		Pause
	Play Rev / Pause / Down		Down
	Play Rev / Pause / Down		Left
	Stop		Stop
	Stop		Exit





Originalfernbedienung Ersatzfernbedienung

	Play / Up		Play
	Play / Up		Up
	Play / Up		Right
	Volume -		Vol -
	Volume +		Vol +

Originalfernbedienung Ersatzfernbedienung