
 



 


 

 

 













 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Lang		Dual
	HDMI		Smart
	Tv/Radio		TV/R
	Recall		Back






 



 

 









 
 

 

 

Originalfernbedienung Ersatzfernbedienung

	Dev.List		List
	EPG		Guide
	Subtitle		Subt
	Text		Text
	Auto		Options
	Exit		Exit
	Info		Info
	Zoom		Eject
	Menu		Menu
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Filelist		Format
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

