
 




 



 




 
 


 
 
 



 




 
 












 
 
 





 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Slow Up		Ch +
Auto/Track		Smart
Pause		Pause
Subt.		Subt
Rep/A-B	 + 	Shift + Text
Title		List
Zoom	 + 	Shift + Eject
Repeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung

OK Enter		Ok
Menu Right		Right
Return		Back
Menu Down		Down
Progr.		Sleep
Volume+		Vol +
Next		>>
Top Menu		D. Menu
Volume-		Vol -
1		1
Prev.		<<
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Setup	 Options		
8	 8		
Record	 Rec		
F.Forward	 >>		
Angle	 Format		
Play	 Play		
Remain	 Media		
Clear/00:00	 Exit		
Audio	 Dual		
Rewind	 <<		
9	 9		
+10	 Guide		
0	 0		
C/CH	 Pre Ch		
Open/Close	 Eject		

