


 

 
 

 

 
 
 
 




 


 

 







**Originalfernbedienung    Ersatzfernbedienung**

	AVR/AVC On		Power
	AVR/AVC Off		Shift + Power
	Power Tv		TV/R
	Power VCR		Smart
	Power DVD/VDP		Media
	PHONO		1
	CD		2
	DVD/VDP		3
	VCR-1		4
	VCR-2 / V.AUX		5
	TV/DBS		6
	MD/Tape Mon		7
	Tuner		8
	Shift		9
	Video Select		0
	Input Mode		Guide
	Surround Mode		Pre Ch

**Originalfernbedienung    Ersatzfernbedienung**

	<< Deck-VCR		Shift + <<
	< Deck-VCR		Shift + Play
	Deck-VCR >		Shift + Pause
	Deck-VCR >>		Shift + >>
	Stop Deck-VCR		Shift + Stop
	CH+		Ch +
	CH-		Ch -
	Disc Skip+		Blue
	Play CD/MD/CDR-DVD/		Play
	Stop CD/MD/CDR-DVD/		Stop
	Pause CD/MD/CDR-DVD/		Pause
	CD/MD/CDR-DVD/ VDP >>I		>>I
	I<< CD/MD/CDR-DVD/		I<<
	CD/MD/CDR-DVD/ VDP >>		>>
	<< CD/MD/CDR-DVD/		<<
	System/Setup		Menu
	Surround/Menu		D. Menu





## Originalfernbedienung Ersatzfernbedienung

	T.Tone/Return		Back
	Status/Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH.Select/Select		Ok
	Master Volume		Vol +
	Master Volum		Vol -
	Muting		Mute
	Tv Vol+		Shift + Vol +
	Tv Vol-		Shift + Vol -
	Tv CH+		Shift + Ch +
	Tv CH-		Shift + Ch -

## Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	AVR/AVC On		Power
	AVR/AVC Off	 + 	Shift + Power
	Play CD/MD/CDR-DVD/		Play
	Pause CD/MD/CDR-DVD/		Pause
	Stop CD/MD/CDR-DVD/		Stop
	CD/MD/CDR-DVD/ VDP >>I		>>I
	I<< CD/MD/CDR-DVD/		I<<
	CD/MD/CDR-DVD/ VDP >>		>>
	<< CD/MD/CDR-DVD/		<<

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	AVR/AVC On		Power
	AVR/AVC Off	 + 	Shift + Power
	CH+		Ch +
	CH-		Ch -
	Deck-VCR >>		>>
	<< Deck-VCR		<<
	Deck-VCR >	 + 	Shift + Pause
	Stop Deck-VCR	 + 	Shift + Stop
	Title		Exit
	CD/MD/CDR-DVD/ Disc Skip+		Exit
	Play		Blue
	CD/MD/CDR-DVD/ Play		Play
	Pause		Pause
	CD/MD/CDR-DVD/ Pause		Stop
	CD/MD/CDR-DVD/ VDP >>I		>>I
	I<<		I<<
	System/Setup		Menu
	Surround/Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

	T.Tone/Return		Back
	Status/Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH.Select/Select		Ok

