

 




























 








 
 

 



 





 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	[]		Display / Media
	[≡]		Text / Goto
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	[i+]		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	[+]		Picture / Format
	Up		Up
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Down		Down
	Right		Right
	Yellow		Yellow / YouTube / Repeat
	Left		Left
	Red		Red / Netflix / Search
	Vol+		Vol+
	Vol-		Vol-
	PR+		CH+ / Page+
	PR-		CH- / Page-

