
 

 















 



 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv	 + 	Shift + Power
	Eject		Eject
	Surr		Options
	Picture Mode		Format
	O)))		Dual
	[...]		Subt
	Vol+		Vol +
	Vol-		Vol -
	Clear		Exit
	Camera		3D
	Tv/DVD		Media
	Search Mode		TV/R
	I<<		I<<
	>>I		>>I
	<</<I		<<
	I>/>>		>>

Originalfernbedienung Ersatzfernbedienung

	Replay		List
	Play		Play
	Pause		Pause
	Stop		Stop
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Top Menu		D. Menu
	Menu		Menu
	Return		Back

