


 



 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open / Close		Eject
	DVD		Smart
	VCR		Media
	Display		Info
	Disc Menu		D. Menu
	Up / PR/TRK+		Up
	Up / PR/TRK+		Ch +
	Left		Left
	OK / Enter		Ok
	Right		Right
	Down / PR/TRK-		Down
	Down / PR/TRK-		Ch -
	Setup		Menu
	Return		Back
	Pause / Step		Pause
	I<< Skip		I<<




 

**Originalfernbedienung    Ersatzfernbedienung**

	>>I Skip		>>I
	Stop		Stop
	<< Backward		<<
	Play		Play
	>> Forward		>>
	Program		Sleep
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung











 


 




















	Audio		Dual
	Subtitle		Subt
	Zoom		Shift + Eject
	Angle		Format
	Marker		Pre Ch
	Search		TV/R
	Title		Vol +
	Repeat		Text
	Random		3D
	A-B		Shift + Text

Originalfernbedienung Ersatzfernbedienung


 





 

 

 

 










 

 

 





**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	Eject		Eject
	TV / VCR		Menu
	DVD		Smart
	VCR		Media
	AV		AV
	CLK / CNT		3D
	Up / PR/TRK+		Up
	Up / PR/TRK+		Ch +
	Down / PR/TRK-		Down
	Down / PR/TRK-		Ch -
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Pause / Step		Pause
	Stop		Stop

**Originalfernbedienung   Ersatzfernbedienung**

	<< Backward		<<
	Play		Play
	>> Forward		>>
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Search		TV/R
	CM Skip		Yellow





Originalfernbedienung Ersatzfernbedienung

	Rec / ITR		Rec
	LP		Sleep
	Show View		Options

Originalfernbedienung Ersatzfernbedienung