


**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Add / Clear		Exit
	<<		<<
	>>		>>
	Pause		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Navigat		Smart
	Title		List
	Menu		Menu
	Subtitle		Subt
	Angle		Format
	Source		AV
	Rec		Rec




**Originalfernbedienung Ersatzfernbedienung**

	Timer	+	Shift + AV
	Edit		Media
	USB		Red
	DVD		Green
	HDD		Yellow
	Disc Oper		D. Menu
	Slow	+	Shift + Pause
	Return		Back
	Repeat		Text
	Zoom	+	Shift + Eject
	CH+		Ch +
	CH-		Ch -
	P/N		TV/R
	Audio		Dual
	DV		Vol +
	L/P		Info
	Mute		Mute

**Originalfernbedienung Ersatzfernbedienung**

	TV		Vol -
	TV		Blue

