



Originalfernbedienung Ersatzfernbedienung

	Modo de espera	 + 	Shift + Sleep / Timer
	Ecuizador	 + 	Shift + Audio / Lang I/II
	Surround	 + 	Shift + Eject / Surround
	Abrir/Cerrar		Eject / Surround
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	Angulo	 + 	Shift + Picture / Format
	4		4
	5		5
	6		6
	Subtitulo		Subtitle / EQ
	7		7
	8		8
	9		9
	Busqueda		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Borrar	 + 	Shift + Back / Return
	0/10		0
	10+		Guide / EPG / -/-
	Titulo		Text / Goto
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Programa		TV/Radio /
	Down		Down
	Pantalla		Picture / Format
	PAL/NTSC		Sound / Title
	Configuracion		Setup / OPT /
	Extracto	 + 	Shift + TV/Radio / Program
	Vol+		Vol+
	Silencio		Mute / Dimmer



