






 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	USB		Media
	Power Tv		Shift + Power
	Video Sel		Smart
	HDMI Sel		AV
	Repeat		Text
	A-B Repeat		Shift + Text
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 
 

 













 

 
 




Originalfernbedienung Ersatzfernbedienung

	0/I.Skip		0
	Bookmark		Guide
	Step		Options
	<<		<<
	I.Replay		3D
	Pause		Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Play		Play
	>>I		>>I
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Tv/Video		TV/R
	Tv CH+		Ch +
	Tv CH-		Ch -
	Menu		Menu





**Originalfernbedienung Ersatzfernbedienung**

	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Disc Menu		D. Menu
	EZ View		Format
	Exit		Exit
	Cancel		Pre Ch
	Subtitle		Subt
	Audio		Dual
	Info		Info
	Zoom		Shift + Eject

**Originalfernbedienung Ersatzfernbedienung**