






 



 


 












Originalfernbedienung Ersatzfernbedienung

	System Standby		Power
	Sleep		Sleep
	Master Vol+		Vol +
	Master Vol-		Vol -
	Muting		Mute
	Top Menu		Menu
	DVD Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Recall		Pre Ch
	>>I/CH/Preset+		>>I
	I<</CH/Preset-		I<<
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	Tv/Video/ANT		TV/R
	Main Menu		Smart
	Test Tone		Back
	Multi CH		3D
	2CH		Subt
	AFD		Dual
	A.F.D.		List
	+		Ch +
	-		Ch -
	Menu >		Shift + Right
	< Menu		Shift + Left
	Tv CH+		Shift + Ch +
	Tv CH-		Shift + Ch -
	Tv Vol+		Shift + Vol +





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Video 1		Red
	Video 2		Green
	SA-CD		Yellow
	DVD		Blue
	MD/Tape		AV
	Tuner		Eject
	Master Vol+		Vol +
	Master Vol-		Vol -
	Muting		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7


Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	>10/Shift/-/--		Guide
	Enter/D.Tuning/Return		Info
	D.Skip/TV/VTR		Text
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop




 







 







 









 

 

 




Originalfernbedienung Ersatzfernbedienung

	Standby CD		Power
	Video 1		Red
	Video 2		Green
	SA-CD		Yellow
	DVD		Blue
	MD/Tape		AV
	Tuner		Eject
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0 CD		0

Originalfernbedienung Ersatzfernbedienung

	>10/Shift/-/-- CD		Guide
	Enter/D.Tuning/Return CD		Info
	I<< CD		I<<
	>>I CD		>>I
	<< CD		<<
	>> CD		>>
	Play CD		Play
	Pause CD		Pause
	Stop CD		Stop
	D.Skip/TV/VTR CD		Text
	Master Vol+		Vol +
	Master Vol-		Vol -
	Muting		Mute
	Standby Video		Shift + Power
	1 Video 1		Shift + 1
	2 Video 1		Shift + 2
	3 Video 1		Shift + 3



 





 



 

 


 














Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Video 1		Red
	Video 2		Green
	SA-CD		Yellow
	DVD		Blue
	MD/Tape		AV
	Tuner		Eject
	1 MD/Tape		1
	2 MD/Tape		2
	3 MD/Tape		3
	4 MD/Tape		4
	5 MD/Tape		5
	6 MD/Tape		6
	7 MD/Tape		7
	8 MD/Tape		8
	9 MD/Tape		9
	0 MD/Tape		0

Originalfernbedienung Ersatzfernbedienung

	>10/Shift/-/-- MD/Tape		Guide
	Enter/D.Tuning/Return MD/Tape		Info
	D.Skip/TV/VTR MD/Tape		Text
	I<< MD/Tape		I<<
	>>I MD/Tape		>>I
	<< MD/Tape		<<
	>> MD/Tape		>>
	Play MD/Tape		Play
	Pause MD/Tape		Pause
	Stop MD/Tape		Stop
	Muting		Mute
	Master Vol+		Vol +
	Master Vol-		Vol -
	Standby Video		Shift + Power
	1 Video 2		Shift + 1
	2 Video 2		Shift + 2
	3 Video 2		Shift + 3



