









 
 

 

 

 






 
 
 
 









 

 









 

 
 
 
 


 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	USB		Smart
	Radio		TV/R
	Coax		3D
	AUX		AV
	MP3 Link		Media
	Audio		Dual
	Setup		Menu
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	I<		I<<
	Play/Pause		Play
	>I		>>I
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Surround		Options
	Treble		Ch +
	Bass		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 Subtitle	AD  Subt		
 Audio Sync	FAV  Pre Ch		
 Repeat/Program	REPEAT  Text		
 Repeat A-B	DISC NAV  List		
 Zoom	ZOOM  Eject		
 Sound Mode	 Green		

