



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
POWER	POWER	[Red Power Button]	Power
[Vol -]	VOL-	[Page Down / Vol]	Vol - / Page -
[Vol +]	VOL+	[Page Up / Vol]	Vol + / Page +
COMP.	COMP.	[Video Comp]	Comp / Video
VIDEO	VIDEO	[Shift + Video Comp]	Shift + Comp / Video
AUTO ADJ.	AUTO ADJ.	[Auto]	Auto
D-ZOOM	D-Zoom	[Aspect Eco]	Eco / Aspect
[Up]	UP	[Up Arrow]	Up
[Left]	LEFT	[Left Arrow]	Left
ENTER	ENTER	[Enter]	Enter
[Right]	RIGHT	[Right Arrow]	Right
[Down]	DOWN	[Down Arrow]	Down
MENU	MENU	[Menu]	Menu
EXIT	RESET	[Mode]	Mode

Originalfernbedienung	Ersatzfernbedienung

